

Find the **accessories** you're looking for.



Raw Shield Mount

Made to protect Raw in harsh environments, adding an extra layer of protection.



Trackunit **Pass K300** Installation Guide




RFID Card Reader

USB RFID card reader is a easy tool to activate K300 RFID card and DualID RFID card access for operators.




Trackunit RFID Cards

The RFID card is an easy way to control access to your equipment through the K300 or DualID.

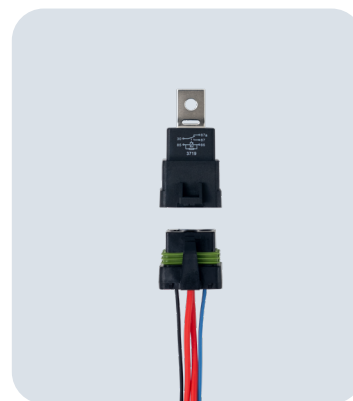

Splash Proof Relay

Used when required, to interface Trackunit Raw to specific machine wiring signals or controls.

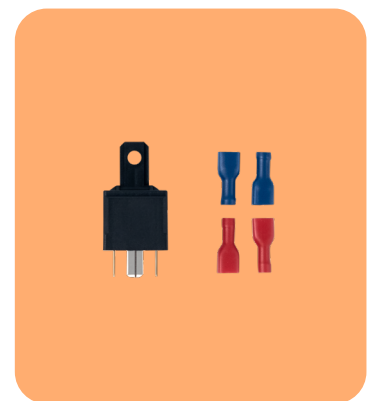

Standard Relays

Used when required, to interface Trackunit Raw to specific machine wiring signals or controls.



Ferrite

Designed and certified for use in Japan with and TU600 and TU700 models.



Power Cable

Versatile solutions to connect Trackunit Raw to any type of machine.



Keypad Bracket

Made to protect the K300 and DualID II in harsh environments, adding an extra layer of protection.

Help is here. Whenever and however you need it.



Help Center

Installation, activation, and onboarding info can be found at helpcenter.trackunit.com



Customer Success

Please reach out to our experienced support team at support@trackunit.com




Order

Already know what you need? Place your order at trackunit.com

Trackunit Pass K300

Secure Equipment Means Safe Jobsites



Protect Equipment

Equipment is secured using access control, reducing unauthorized use of equipment.

Safety

Access Management secures working environments and increases job site safety.

Theft Protection


 
Access Management allows preauthorized personnel equipment access, minimizing theft.

Product Diagram

W = 65 mm / 2.56 inches

H = 15.6 mm / 0.61 inches

L = 118.0 mm / 4.65 inches



Overview

Trackunit Pass K300 solution is a powerful combination of fleet management and user authentication for machinery.

Product Dimensions

- Length: 118.0 mm [4.65"]
- Width: 65.0 mm [2.56"]
- Height: 15.6 mm [0.61"]
- Weight: 210 g [7.4 oz] with cable


Tech Specs

- Aprovals: CE, FCC, ISED
- Environmental Class: IP66, IP67
- Operating Temperature: -30°C to +70°C / -22°F to 158°F
- Storage Temperature: -20°C to +50°C / -4°F to 122°F
- 3 to 16 Digit Numeric Pin Code
- RFID Reader 13.56 MHz
- Mifare
- Mifare DESFire EV1
- UV Class (ASTM D4329/D5870)


What's in the Box

- Pass K300
- 3m [9.8 ft] Cable w/ M8 Connector
- Mounting Kit
- Installation & Safety Guides


Compatible With



RFID Card Reader




Keypad Bracket



RFID Cards

Installation


Installing Pass K300



1. Mounting


Insert two M4 screws (5/32") through the mounting holes on the K300 and into the mounting surface. Use a flathead screwdriver to tighten the M4 screws being careful not to overtighten.

The M4 screws must follow:
Head diameter: 8.0mm Max / 7.0mm Min
Head thickness: 4.0mm Max
Thread size: 4.0mm Max / 3.5mm Min
Length: 10.0mm Min

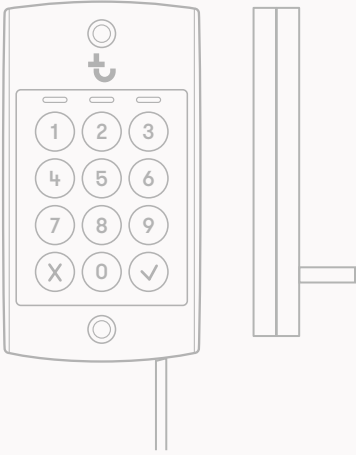

2. Connecting the Cable

Connect the M8 Connector on the 3m Cable to the M8 Connector on a Trackunit Raw wired to a Machine (for further information, refer to the wiring diagram in the Raw User Guide). Depending on your configuration, you can run the 3m Cable out the bottom or back of the K300.



3. (Optional) Drilling a Hole

Drill an 11 mm [.4"] Hole in the mounting surface and pull the 3m Cable through the Hole.

Note: Trackunit is not responsible for any (product, equipment, or installer) damage during the installation process.

 
Using Pass K300

User Guide


Assigning Users

Use Trackunit Manager to enable Access Control on a Machine and assign control keys to certified users. Refer to help-center:trackunit.com

Using the Keypad

- Enter the Pin Code on the Key Pad.
- Select the Confirm button .
- The LEDs will flash green, indicating a valid Pin Code.










Cancelling Authorization


- To cancel an authorization attempt, select the Cancel button .
- The LEDs will flash red, indicating that the input is cancelled.
- Wait 10 seconds before entering a new Pin Code or scanning an RFID Card.

Note: Don't use an RFID Card and Pin Code simultaneously.

Using RFID Card

- Place the RFID Card over the RFID Card Reader area (indicated by the outline over the Keypad).
- An audible beep indicates a valid card input.
- The LEDs will flash green, authorizing the RFID Card.

LED mode	LED color	Status indication
No LED		-K300 is in Sleep mode
Orange Running		-Trying to get CAN access on TU700
White Solid		-K300 is on -Ready to unlock
Green Blinking		-Machine is unlocked -Ignition is OFF
Green Solid		-Machine is unlocked -Ignition is ON
Red Running		-Machine is in process of locking -Ignition is OFF
Red Blinking Twice		-Wrong Pin / Card is not working
Red Solid		-Machine is set to "Locked For All"
Pink Running		-Waiting for Authentication Response from TU700
Purple Running		-Currently undergoing a firmware update



Wakeup

To preserve energy usage, the K300 will go to sleep after 1 minute of inactivity, which will turn off the backlight and LEDs of the K300. There is a proximity sensor with a range of a few centimeters in the K300 which will detect the user's hand and wake up the K300, allowing the user to see the keys in low light environments.