

# Trackunit Kin Manual

Trackunit Kin  
Manual



# Installation

**Install Trackunit Kin using either glue, screws or zip ties:**


**Glue mounting recommendation:** MS Polymer, 1 component liquid adhesive, temperature range: -40 to +90 deg C, tensile strength: > 1.75 N/mm<sup>2</sup>

**Screw mounting:** Kin hole size is D4.6 mm / 0.18 in.

Use e.g. pan head tapping screws D4.2 mm or 5/32"

**Zip Ties mounting for cable or handtools:** Stainless steel or strong nylon zip ties – width 4.8mm.

To optimize Bluetooth range, avoid close signal interference or signal-blocking material like mounting beneath or inside metal.

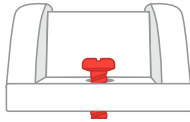

# Activation

**Activate Trackunit Kin by pulling off the sticker attached to the Kin.**

Make sure to activate Kin in light surroundings. You can choose to activate right after installing or wait until after the onboarding. Note that Kin will not send data or update any locations until activated.

# Onboarding

1. To onboard Trackunit Kin, open the Trackunit Go app.  
Download in App Store and Google Play



2. Go to 'Settings' and select 'Onboard Trackunit Kin'.
  3. Follow the instructions starting with holding your phone close to the Kin. If your phone does not detect the Kin, you can choose to scan the QR code visible on top of the Kin.
  4. Once the right Kin is detected, click 'Set Up' and start completing the details about your asset, add an image and finish by clicking 'Done'.
- 

## Help Center

Get more details about installation, activation and onboarding in the Trackunit Help Center at [helpcenter.trackunit.com](https://helpcenter.trackunit.com)

